GB

QUICK REFERENCE GUIDE

VT 255

CONTROL PANEL

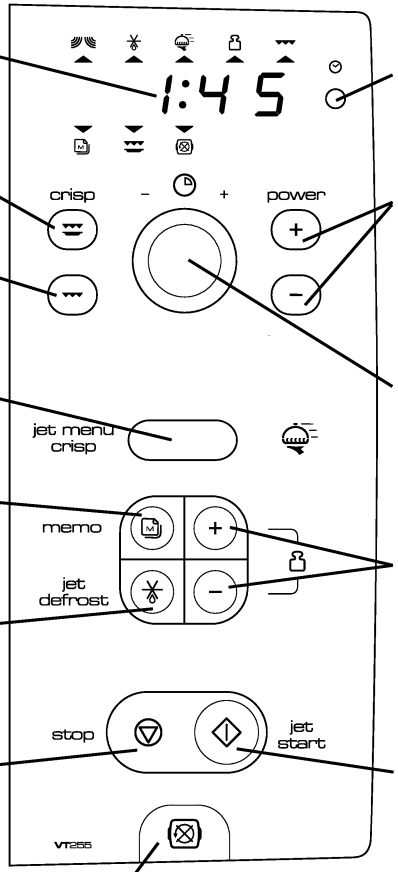

Digital display
The display includes a 24-hour clock and indicator symbols.

Crisp button
Use to select Crisp function.

Grill button
Use to select Grill function.

Jet Menu Crisp
Use to select food class.

Memo button.
Use to recall stored favorite settings.

Jet Defrost button.
Use to select type of food to be defrosted.

Stop button
Press to stop or reset any of the oven functions.

Clock button
Use to set the 24-hour clock.

Power buttons
Use to set the desired power level

Adjust knob
Use to set the cooking time.

Weight button Use to enter the needed amount.

Jet Start button
Use to start the cooking process or invoke the Jet Start function.

Stop TurnTable button
Use to stop the turntable. This function can only be used when cooking with micro-waves only. The button will not work with other functions.

TO PAUSE OR STOP COOKING

To pause cooking
The cooking can be paused to check, turn or stir the food by opening the door. The setting will be maintained for 10 minutes.



To continue cooking
Close the door and press the Start button *ONCE*. The cooking is resumed from where it was paused.
Pressing the Start button *TWICE* will increase the time by 30 seconds.

If you don't want to continue cooking
Remove the food, close the door and press the STOP button

A beep will signal once a minute for 10 minutes when the cooking is finished. Press the STOP button or open the door to cancel the signal.
Note: The oven will only hold the settings for 60 seconds if the door is opened and then closed after the cooking is finished.

CHOOSING MICROWAVE POWER

MICROWAVES ONLY	
Power	Suggested use:
JET (800 W)	**Reheating of beverages,** water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.
650 W	**Cooking of** fish, meat, vegetables etc.
500 W	**More careful cooking** e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
350 W	**Simmering stews,** melting butter.
160 W	**Defrosting.** Softening butter, cheeses.
90 W	**Softening** Ice cream

GRILL COMBI	
Power	Suggested use:
650 W	**Cooking** Vegetables & Gratins
350 - 500 W	**Cooking** Poultry & Lasagne
160 - 350 W	**Cooking** Fish & frozen gratins
160 W	**Cooking** Meat
90 W	**Gratinating** Fruit
0 W	**Browning** only during cooking

GB

QUICK REFERENCE GUIDE

VT 255

RECOMMENDED WEIGHTS FOR JET DEFROST

Use this function for defrosting ONLY.
Jet Defrost can only be used for very fast defrosting of frozen food belonging to the categories listed here. Use manual defrost for other food or weights not listed.

PLEASE NOTICE
To achieve perfect results it is NECESSARY to:
- Input, with the max. possible precision, the WEIGHT of the food selected.
- Turn the food when the oven prompts you to do so.

FOOD CLASS		AMOUNT	HINTS
1	**MEAT**	**100G - 2KG**	Minced meat, cutlets, steaks or roasts.
2	**POULTRY**	**100G - 2.5KG**	Chicken whole, pieces or fillets.
3	**FISH**	**100G - 1.5KG**	Whole, steaks or fillets.
4	**VEGETABLES**	**100G - 1.5KG**	Mixed vegetables, peas, broccoli etc.
5	**BREAD**	**100G - 1KG**	Loaf, buns or rolls.

FOR FOOD NOT LISTED IN THIS TABLE and if the weight is lesser or greater than recommended weight, you should follow the procedure for "Cook and reheat with microwaves" and choose 160 W when defrosting.

RECOMMENDED WEIGHTS FOR JET MENU CRISP

FOOD CLASS		RECOMMENDED AMOUNT	ACCESSORIES TO USE	DURING COOKING
1	**RICE MIX**	**300G - 650G**	**INSERT THE EMPTY CRISP PLATE. ADD FOOD WHEN "ADD FOOD" IS DISPLAYED**	**STIR FOOD**
2	**PASTA MIX**	**250G - 550G**	**INSERT THE EMPTY CRISP PLATE. ADD FOOD WHEN "ADD FOOD" IS DISPLAYED**	**STIR FOOD**
3	**SOUP**	**250 - 1000G**	**MICROWAVE SAFE VESSEL**	**STIR FOOD**
4	**DINNER PLATE**	**200G - 500G**	**MICROWAVE SAFE PLATE**	
5	**MIXED VEGETABLES**	**150G - 600G**	**MICROWAVE SAFE VESSEL**	**STIR FOOD**
6	**BUFFALO WINGS / CHICKEN NUGGETS**	**250G - 500G**	**USE CRISP PLATE**	**TURN FOOD**
7	**FRENCH FRIES**	**250G - 500G**	**USE CRISP PLATE**	**STIR FOOD**
8	**THIN PIZZA**	**250G - 500G**	**USE CRISP PLATE**	
9	**PAN PIZZA**	**300G - 700G**	**USE CRISP PLATE**	
10	**QUICHE**	**250G - 600G**	**USE CRISP PLATE**	
11	**BREADED FISH / FISH STICKS**	**250 - 500G**	**INSERT THE EMPTY CRISP PLATE. ADD FOOD WHEN "ADD FOOD" IS DISPLAYED**	**TURN FOOD**
12	**CORDON BLEU**	**1 - 4 PCS (100-125G A PCS)**	**INSERT THE EMPTY CRISP PLATE. ADD FOOD WHEN "ADD FOOD" IS DISPLAYED**	**TURN FOOD**

FOR FOOD NOT LISTED IN THIS TABLE and if the weight is lesser or greater than recommended weight, you should follow the procedure for "Cook and reheat with microwaves"
NOTE:
Small amounts of oil or butter can be placed on the Crisp Plate during preheating.

TECHNICAL SPECIFICATION

SUPPLY VOLTAGE	230 V/50 Hz
RATED POWER INPUT	2000 W
FUSE	10 A
MW OUTPUT POWER	800 W
GRILL	800 W
OUTER DIMENSIONS (HXWXD)	300 x 521 x 438
INNER DIMENSIONS (HXWXD)	200 x 326 x 320

4 61969 45545 1